


**GETTING STARTED****1****PREPARING THE NEXGUIDE****3****BASIC OPERATIONS****4****OPERATION UNDER THE  
NIGHT SKY****9****SPECIFICATIONS****15**

THANK YOU FOR CHOOSING THE NEXGUIDE AUTOGUIDER.  
THE NEXGUIDE CAN GUIDE AN EQUATORIAL MOUNT WITHOUT THE HELP  
OF A COMPUTER. IT WILL IMPROVE THE IMAGE QUALITY AND HELP YOU ACHIEVE  
PIN-POINT STARS IN YOUR LONG-EXPOSURE PHOTOGRAPHY.

## ABOUT THE NEXGUIDE PACKAGE

Please take some time to check your new NexGuide package and become familiar with each component. Some parts are installed on the NexGuide main body out of the box. You may need to remove them before using the NexGuide.

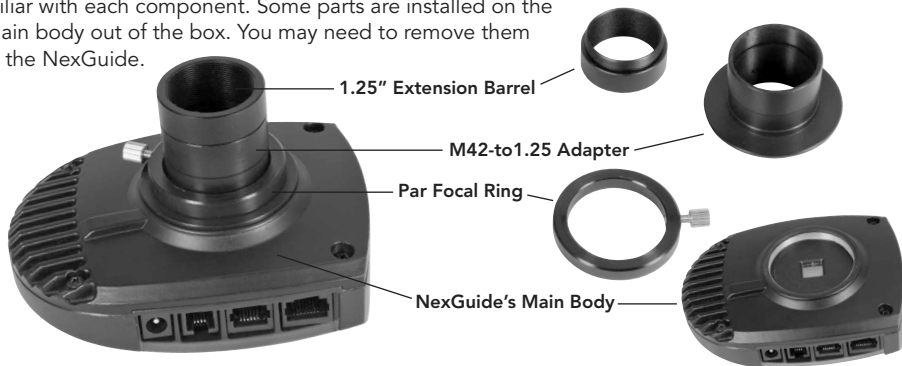

Hand Control

Guiding Cable

Battery Case

Serial Cable\*

RJ-45\*  
Programming  
Plug

1

\*Keep the Serial Cable and the RJ-45 Programming Plug in a safe place for possible future firmware updates.

## NEXGUIDE MAIN BODY

FRONT VIEW



REAR VIEW



A. M42 Thread  
E. Autoguider Port

B. CCD Sensor  
F. Hand Control Port

C. Power Jack  
G. LCD Screen

D. PC (serial) Port

## PREPARING THE NEXGUIDE

### POWERING THE NEXGUIDE


User can use four D type 1.5V batteries (not included) with the battery case as the power supply for NexGuide. To use an optional power supply, it must meet the following requirements:

- DC 6V~14V output voltage, lower voltage is recommended
- 250mA and up output current
- 2.1mm power plug, central positive

### GETTING STARTED

The basic requirements for the equipment to use with NexGuide are:

- **Telescope Mount:** Equatorial mount, or Alt-Az mount with a wedge, with a dual-axis motor drive attached. The motor drive must have a "ST-4" compatible autoguiding port.
- **Guiding Cable:** You may use the supplied autoguiding cable if the pin configuration of your motor drive is the same as the diagram shown on the right.
- **Guide Scope:** An additional telescope with a M42-0.75 thread or a 1.25" eyepiece holder is required as guide scope. Larger aperture, at least 80 mm, helps reduce the exposure time of the NexGuide, thus yielding a more accurate guiding result. The ideal focal length is between 400 mm and 1200 mm. An adjustable guide scope tube ring and a finderscope or red dot finder are recommended for searching for a guide star.

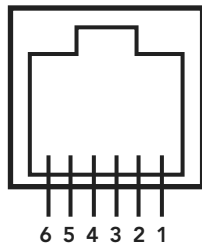

- 1 = NC
- 2 = Ground
- 3 = +RA (left)
- 4 = +DEC (up)
- 5 = -DEC (down)
- 6 = -RA (right)

## BASIC OPERATIONS

It is highly recommended that you familiarize yourself with the basic operations of the NexGuide indoors before going out under the dark sky.

### ATTACHING NEXGUIDE TO A GUIDE SCOPE

There are two ways to install the NexGuide on a guide scope:

**Option 1:** The NexGuide can be threaded onto a telescope with a M42 thread adapter. Generally, this installation method provides the most secure connection. It is best suited for the guide scope equipped with a finderscope or a red dot finder.

**Option 2:** Install the M42-to-1.25 adapter to the main body of the autoguider, and then insert and lock the autoguider into the 1.25 inch eyepiece holder on the guide scope. This installation method is suitable for using a par-focal eyepiece to search for a guide star due to its convenience in exchanging the NexGuide for an eyepiece.

### CONNECTING CABLES

1.) Plug the hand control into the connector on the main body of the autoguider labeled "Hand Control". 2.) Plug one end of the guiding cable into the autoguider port labeled "Auto Guider" and the other end into the guiding port of your telescope's equatorial mount. 3.) Plug in the battery pack or other power supply into the autoguider's power outlet.

### READING THE LCD DISPLAY

The LCD display is divided into two zones. The left half of the LCD screen displays text information, such as the menu, data, and the status of the device. The right half of the LCD screen displays the image captured by the optical sensor.



# BASIC OPERATIONS

## USING THE HAND CONTROL

There are nine illuminated buttons on the Hand Control:

**Menu:** Used to open up or close the main menu.

**ESC:** Used to cancel an operation or quit from the menu.

**Enter:** Used to enter a submenu or confirm an operation.

**+:** Used to increase the exposure time.


**-:** Used to decrease the exposure time.

**Up/Down buttons:** The function of these buttons depends on the working mode of the autoguider:

- **Preview Mode:** Sends a signal to move the dec motors at guiding rate.
- **Guiding Mode:** Set the Dec correction aggressiveness.
- **Menu Mode:** Used to scroll between menu items and change values under sub menus:
  - Noise Menu:** Increases/decreases noise menu values.
  - Lock Menu:** Moves crosshair vertically across preview area when manually locking on a star.

**Left/Right buttons:** The function of these buttons depends on the working mode of the autoguider:

- **Preview Mode:** Sends a signal to move the RA motors at guiding rate.
- **Guiding Mode:** Set the RA correction aggressiveness.
- **Menu Mode:** Used to scroll between menu items and change values under sub menus.
- **Lock Menu:** Moves crosshair horizontally across preview area when manually locking on a star.

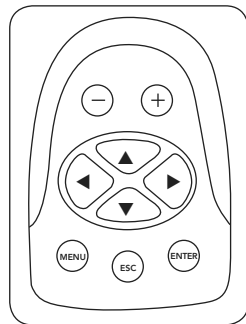

## BASIC OPERATIONS

### OPERATING THE MENUS

---

Press the Menu button to activate the main menu tree. Use the UP or DOWN buttons to scroll between the menu items. Press the ENTER or the RIGHT button to choose between the following submenus:

**Lock Menu:** This submenu is used to lock (or Re-Lock) a star in NexGuide's field of view (FOV) for later guiding operation. After entering this submenu, use the UP or DOWN button to choose from the following options and then press ENTER or LEFT button to confirm:

- **Auto:** The NexGuide will try to automatically lock onto the brightest star in the FOV.
- **Manual/Re-Lock:** The NexGuide will show a small pick-up crosshair in the image area of the LCD display, where you can use the four direction buttons to move the crosshair onto or near a star. Press ENTER to lock the NexGuide on the star.
- **No:** Allow the NexGuide to exit from the locked mode or guiding mode and return to the preview mode.

*Look to the upper left corner of the LCD display to find out which mode the NexGuide is currently working under.*

**Zoom Menu:** This menu is activated only when the NexGuide is working in Preview Mode. It is used to zoom in on the image. Using the UP/DOWN button, choose between the zoom level 1 (the entire image), 2 (the central 256x256 pixels of the image sensor), 3 (the central 128x128 pixels of the image sensor) and 4 (the central 64x64 pixels of the image sensor). After choosing the level, press ENTER to confirm or ESC to keep the previous zoom level.

## BASIC OPERATIONS

**GUIDE Menu:** This menu is used to activate or de-activate autoguiding. Use the UP/DOWN button to choose from the following three options:

- **Auto Cal:** The NexGuide will start an auto-calibration routine prior to the start of autoguiding.
- **Resume:** The NexGuide will immediately re-start autoguiding with the previous guiding parameters.
- **No:** The NexGuide will stop autoguiding and return to the locked mode.

**SWAP Menu:** This menu is used to manually change the button logic of the hand control. Choose between the following three settings and then press ENTER to confirm:

- **SWAP N-S:** Swap the button direction in DEC.
- **SWAP E-W:** Swap the button direction in RA.
- **SWAP X-Y:** Determines the orientation of the X/Y axes as shown on the LCD display. When it is set to "NO", the horizontal (X) axis of the optical sensor and the LCD display is used to detect drifting in RA. When it is set to "Yes", the vertical (Y) axis of the optical sensor and the LCD display is used to detect drifting in RA.

*It is not necessary to use the SWAP Menu to manually set the polarity of the control signal if you choose the "AUTO CAL" option in the GUIDE Menu.*

**CROSS Menu:** This menu is used to display the crosshair on the LCD screen. The center of the crosshair represents the center of the image sensor. The crosshair can also be used to roughly calculate the positioning of a star in the field of view (FOV).

## BASIC OPERATIONS

**DEC BACKLASH Menu:** To reduce the affect of Dec axis backlash during autoguiding, the NexGuide can send a signal to the DEC motors for a pre-determined time whenever the NexGuide reverses direction while guiding. Once this menu is selected, you will see the current setting displayed on the left side of the LCD screen. Use the UP/DOWN button to change the value. Press ENTER or LEFT button to confirm. If your equatorial mount has no or minimal backlash, or if you have done very accurate polar alignment, the Dec backlash should be set to 0.

**NOISE Menu:** This menu is used to set the background noise control in the NexGuide. When there are multiple stars in the NexGuide's field of view (FOV), the noise menu can also be used to filter out dimmer stars and reduce the chances of misidentifying the guide star during auto-guiding.

Higher value of the noise setting leads to a stronger filter effect, but it may affect NexGuide's ability to detect fainter stars. Lower value allows the NexGuide to see fainter stars but tends to introduce noise, therefore, resulting in less accurate auto-guiding. The most suitable noise value depends on a multiple of factors, including the exposure time, the darkness of the sky, and the surrounding temperature. In general, longer exposure shots, higher surrounding temperature, and light-polluted skies tend to introduce more background noise. It is best to choose higher noise value in these circumstances.

You may start with setting the noise to a smaller value so that the image zone of the LCD shows a blank screen, and then gradually increase the value until the image zone just becomes completely black. It is best to choose Zoom Level 1 in order to get a clear image of the entire FOV.

**RESET Menu:** This menu resets all the settings back to the factory default settings.

## OPERATING UNDER THE NIGHT SKY

The key steps of operating the NexGuide are:

**Step 1:** Adjust the focus (PREVIEW mode)

**Step 2:** Find and lock a guide star (LOCKED mode)

**Step 3:** Start autoguiding (GUIDING mode)

The following section explains the practical operations of the NexGuide:

### ADJUST FOCUS (PREVIEW MODE)

The NexGuide enters the PREVIEW mode as soon as the power is turned on. Following is an example of what you will see.

*The left half of the LCD screen displays text information.*

*The current mode.*

*The current exposure.*

*The brightness of the brightest star in the FOV (in milliseconds).*

*The coordinates of the brightest star in the FOV. The center of the image sensor is the reference.*

PREVIEW	
EXP	64
BRI	35
X	105
Y	68

*The right half of the screen displays the image the internal image sensor detects. The stars are represented by dots. The brighter the star the larger the dot is.*

## OPERATING UNDER THE NIGHT SKY

Follow these steps to adjust the focus of the guide scope:

- 1). Insert an optical eyepiece into the eyepiece holder of the guide scope. Activate tracking of the mount. Center a bright star in the eyepiece's field of view.
- 2). Remove the optical eyepiece and replace it with the NexGuide.
- 3). Use the "+" or "-" buttons on the hand pad to set the exposure time to 256 milliseconds.
- 4). Use the NOISE Menu to set the noise control level until the LCD is free of background noise.
- 5). Adjust the focuser of the guide scope until the image of the bright star appears in the LCD as a blank dot. Continue to adjust the focuser until the blank dot appears to be smallest, suggesting that the image is in focus. At this point, if you continue to turn the focuser you will see that the dot becomes larger again. The BRI reading will increase as the image comes into focus. If the BRI reading increases to over 100, use the "-" button to reduce the exposure time to avoid over-exposure.
- 6). Use the controller of the equatorial mount to slowly move the star into the center of the image display area.
- 7). The default zoom level is 1. Set the zoom level to 2 or 3, so you can zoom in on the star. Fine-tune the focuser to obtain the smallest star image and the highest BRI reading. Lock the focuser of the guide scope and remove the NexGuide from the guide scope.
- 8). Now it is time to make a par-focal eyepiece for later use. Use the included parfocal ring to set the spacing of your eyepiece to be in focus with the autoguider. This will come in handy to find another guide star without changing the focus of the guide scope.

## OPERATING UNDER THE NIGHT SKY

Follow these steps to make a par-focal eyepiece:


- 1). Remove the autoguider from the guide scope.
- 2). Place the parfocal ring loosely around the eyepiece barrel.
- 3). Insert the eyepiece into the guidescope focuser. A crosshair or reticle eyepiece is helpful for precise centering of the guide star.
- 4). Slowly slide the eyepiece towards your eye until the star image is sharp. Do not move the focuser knobs.
- 5). Slide the parfocal ring towards the focuser draw tube as far as it will go.
- 6). Use the thumb screws on the ring to lock it into place. This will mark the correct focus position for that eyepiece.
- 7). Make sure your guide star is still centered and replace the autoguider to guide scope.

*You may need to attach the 1.25" extension barrel to the eyepiece if the eyepiece is too short to reach focus.*

Follow these steps to align the crosshairs of the autoguider to match the RA and DEC axis of your telescope's mount.

- 1). If the crosshairs are not already displayed in PREVIEW mode, turn on the crosshair on the LCD screen using the CROSS menu.
- 2). Rotate the autoguider inside the focuser barrel so that when the equatorial mount is slowly slewing in RA axis the star image moves parallel to either the horizontal or the vertical line. Instead of using the hand control of the mount, you may also use the LEFT/RIGHT direction buttons on the NexGuide hand pad to control the RA axis of the mount.

*Remember to mark the position of the NexGuide on the guide scope, so you won't have to perform the autoguider alignment again.*

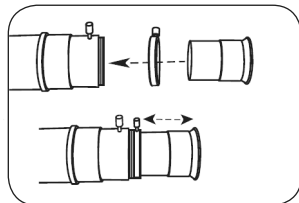

## OPERATING UNDER THE NIGHT SKY


Finding and locking a guide star:

- 1). Locate the celestial object that you will be imaging through your main telescope. Activate tracking on the equatorial mount. The guide scope should also be pointed to the same region in the sky.
- 2). Insert the par-focal eyepiece into the guide scope. Locate a bright star nearby and adjust the guide scope so the star appears in the center of the par-focal eyepiece.
- 3). Replace the par-focal eyepiece with the NexGuide.
- 4). The image of the star should appear in the image zone of the LCD screen. If not, use the “+” button to increase the exposure time until the image of the star appears. Generally speaking, shorter exposure gives better periodic error correction results. The BRI reading on the screen is a good reference. The minimum BRI reading required for the NexGuide to work stably is 10. Try to bring the BRI reading to at least 10 for the best result. Use the NOISE menu to filter out the noise if the image area of the LCD screen becomes blank or the background noise becomes too noticeable.
- 5). Adjust the guide scope to bring the star to the center if it is too close to the edge of the image zone on the NexGuide. This is only necessary when the ZOOM level is set at 1.
- 6). Lock the guide star automatically or manually using the LOCK menu.

If the guide star is successfully locked, the NexGuide will enter the “LOCKED” mode. The ZOOM level will automatically be switched to 4, and NexGuide will display an area of 64\*64 pixels near the locked star. The NexGuide will keep tracking the star as it slowly drifts away from its original position. When manually locking on a star, use the arrow button to position the small crosshair over the desired guide star. Press ENTER to manually lock on that star.

## OPERATING UNDER THE NIGHT SKY

Once in locked mode, a small cross will display on the screen to indicate the center of the star. The X and Y coordinates of the star will be displayed in the text area of the LCD. The diagram on the right is what you will see in the LOCKED mode.

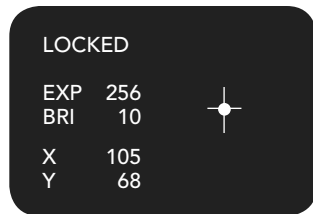

### Autoguiding (GUIDING MODE)

Once the NexGuide is successfully locked onto a star, you may activate guiding with the GUIDE menu.

#### Activate Autoguiding

**AUTO CAL:** Auto Calibration is recommended whenever the telescope has been moved to a new object. It will start an auto-calibration routine to detect the correct setting of the guiding parameters, including control signal polarity ("SWAP N-S", "SWAP E-W" and "SWAP X-Y" parameters) as well as the guiding aggressiveness for the RA and Dec axes. NexGuide will automatically start autoguiding after the calibration is finished successfully.

**RESUME:** This is to resume previous autoguiding. NexGuide will skip the auto-calibration routine and start autoguiding with the previous guiding parameters.

## OPERATING UNDER THE NIGHT SKY

The following diagram is what you will see in the GUIDING mode.


*RA and Dec*

*aggressiveness*  
*(milliseconds/pixel).*

*The drift in RA.*

*The drift in Dec.*

*Indication that the NexGuide is*  
*sending RA+/RA- or Dec+/Dec*  
*signals via the autoguider port.*

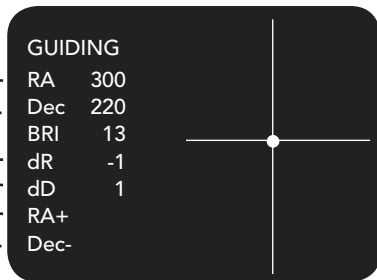

*A crosshair is displayed for you to monitor the effects of autoguiding. The center of the cross is the position of the guide star when guiding is activated.*

### Operations

The guiding aggressiveness of RA or Dec axis can be adjusted with the direction buttons on the hand control. Use the RIGHT/LEFT buttons to increase/decrease the RA aggressiveness and the UP/DOWN buttons to increase/decrease the Dec aggressiveness. If the NexGuide loses the guide star during autoguiding it will prompt "STAR LOST". Press ESC to return to PREVIEW mode and begin the auto calibration routine again. To avoid creating any vibration that may interfere with guiding, remember to place the hand control on a solid surface (such as accessory tray) so that it doesn't hang directly from the autoguider.

### Suspend Autoguiding

Use menu GUIDE/STOP to stop autoguiding. The exposure on the photographic camera should be stopped before suspending autoguiding.

## SPECIFICATIONS

### IMAGE SENSOR

Type: SONY ICX404AL CCD Sensor

Chip size: 5.59 mm (X) \* 4.68 mm (Y)

Number of effective pixels: 510 (X) \* 492 (Y)

Unit cell size: 9.6um (X) \* 7.5um (Y)

Formula for angular resolution in arc second:

$(206.265/FL * \text{Pixel size (mm)})$

FL is the focal length of the guide scope in millimeters.

### POWER SUPPLY

DC 6V~14V, 250mA

Power Jack: 2.1 mm, tip positive

### EXPOSURE TIME

1, 2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096 ms

### SENSITIVITY

Typically, the NexGuide can capture and guide a star with up to the magnitude of 8 under the following conditions: Regular 80 mm aperture refractor, 2048 ms exposure time, and good seeing conditions.